


# Phonak Digimaster Soundfield Speaker

## Firmware Upgrade Instructions

1. Click on link below to download the Phonak Firmware Upgrader on your computer /laptop  
<https://www.phonak.com/en-int/hearing-devices/microphones/roger-online-tools>
2. Scroll down, click on “Download your Roger Upgrader Software”
3. Open file, click on Roger Upgrader > Run
4. Follow prompts to install Roger Upgrader Software on your computer
5. Once installed, Open Roger Upgrader Software on your computer or laptop.  
(Laptop ideal to allow close distance to Digimaster Soundfield Micro-USB port connection)
6. Using the provided Phonak “USB to Micro-USB” charging cable, connect USB port to computer / laptop.
7. Connect Micro-USB port to Digimaster Soundfield. (Micro-USB port located on the end of Digimaster speaker).
8. On Roger Upgrader software, click “Manual Firmware Change”

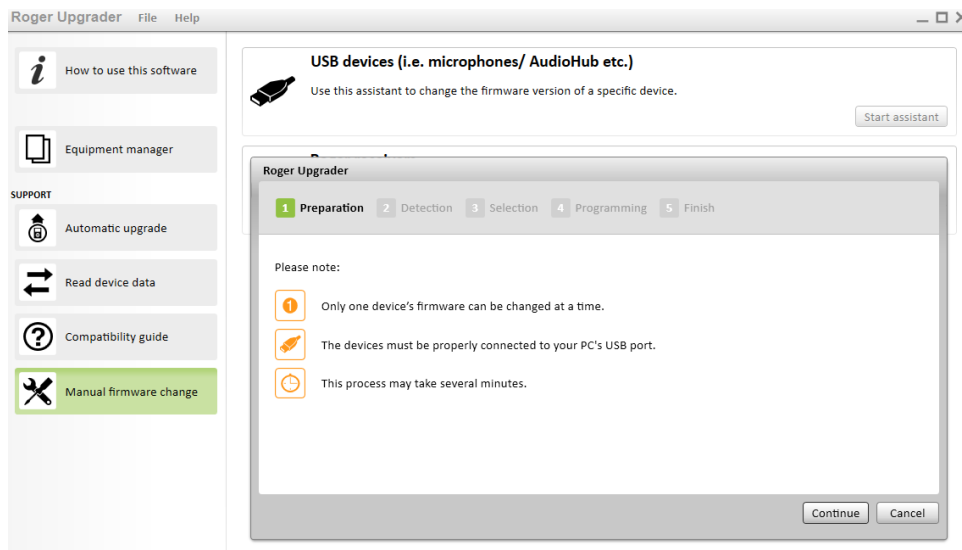

9. Select USB Devices Select “Start Assistant”
10. Select “Continue”
11. Digimaster upgrade will show, select “continue”
12. Do not unplug the Digimaster from computer /laptop until the Roger Upgrader upgrade is complete. “The devices firmware has been updated.”