

## Roger Installer - Replacing Battery (no tools required)

1. Press gently with finger on battery compartment door (currently in horizontal position) and turn clockwise to vertical position. Battery door will release. Remove battery door and battery.







2. Insert new AAA battery, negative (-) end first. Positive (+) end to face outwards as pictured on back of Roger Installer pad.



4. Replace battery compartment door. Ensure door is lined up correctly when inserting. Do NOT force the door closed. Groove on the battery door must be vertical with copper wire positioned on the bottom right. Once the battery door is in the correct position, the door will easily slide in place with a slight springing motion.







5. Gently push the battery door closed with finger and turn counterclockwise to a horizontal position. Battery door will then be sealed in place.



6. Please ensure Roger Installer is turned off when not in use to avoid battery drain.

